

EN



Installation instructions OSE retrofit kit

HOME MOTION by
somfy.

Components required for installation

OSE rubber profile

3Vdc photoelectric sensors


OSE stops




Installation types

Assembly A


Assembly B

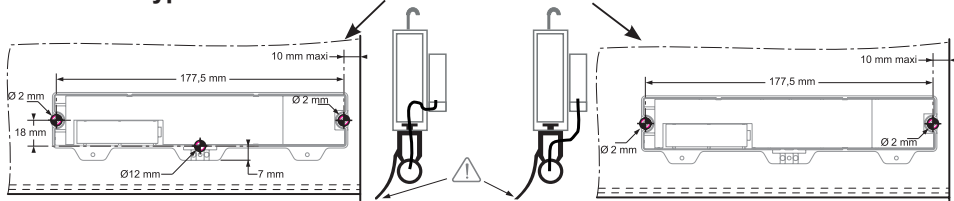


Rubber

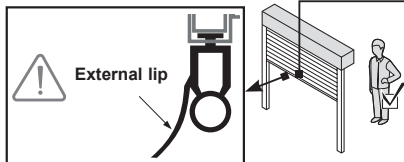

External lip


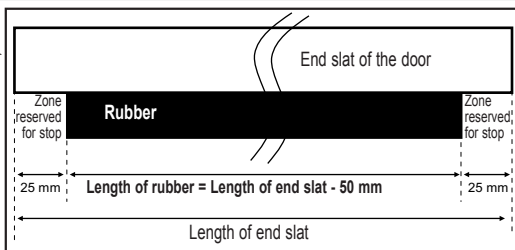


Photoelectric sensors

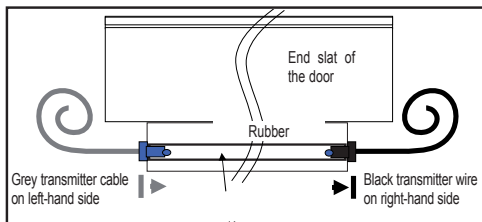


Assembly A

Assembly B

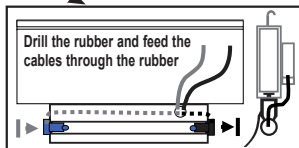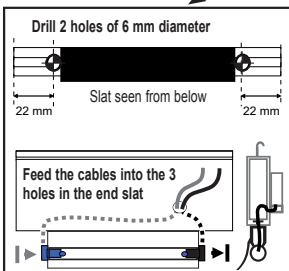

Stops

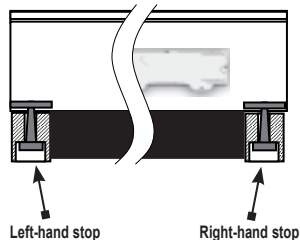

Do not throw out your device or spent batteries with domestic waste. It is your responsibility to dispose of your electronic equipment in the relevant recycling points.